

## Brooksville Pulling Association

### Open Gear Rules

1959 and Older

1. Safety rules apply to all tractors, classes, and persons.
2. RPM for open class is 3000 RPM.
3. All tire sizes allowed up to 24.5.
4. Tires can be cut.
5. Draw bar maximum height of 20 inches to hook point.
6. Draw bar can be fixed in any direction. (No floating draw bars.)
7. Length of draw bar is 18 inches maximum from the center of the wheel to the hook point.
8. Open Gear tractors must have closed ring hitch – 3 inches or more inner diameter and tractor must not obstruct chain or clevis.
9. Factory fuels only: Kerosene, Diesel, Propane, Gasoline, CAM 2. Nothing injected.
10. Must have working brakes.
11. MANDATORY THAT ALL TRACTORS HAVE WHEELIE BARS AND A KILL SWITCH.
12. Tractor must have original frame, original stock motor mounts, and the same cylinder motor as the original.
13. Pull in 2<sup>nd</sup> or higher. No 1<sup>st</sup> Gear Pulling.
14. Weight racks will be allowed:
  - Weights not to extend more than 11 feet from center of rear axle to the front.
  - Weights not to extend past the rear tire to the rear.
  - All weights must be secured to weight rack.
  - All weight racks to be stationary.
15. Classes:        3500   4500   5500   6500   7500   8500   9500   10500
16. It is the pullers responsibility to provide proof of tractors eligibility.
17. NO ONE IN FRONT OF SLED DURING THIS CLASS.
18. Must have a Roll Bar and Seat Belt or High Back Seat.