

Brooksville Pulling Association Super Antique Rules

1959 and Older

1. Safety rules apply to all tractors, classes, and persons.
2. Drawbar maximum height of 20 inches to hook point.
3. Length of drawbar 18 inches minimum from center of wheel to hook point.
4. Tractors equipped with removable clevis or pull ring.
5. Factory fuels only. No alcohol, nitrous oxide, additives to diesel, etc.
6. Factory RPM must be within 30%, checked with hand tachometer with hand throttle full open.
7. Must have working brakes.
8. Must have working governors – no manual or override.
9. Recommended – engine kill switch within reach of driver.
10. Mandatory Wheelie Bars and Kill Switch.
11. Weight racks will be allowed:
 - Weights not to extend more than 11 feet from center of rear axle to the front.
 - Weights not to extend past the rear tire to the rear.
 - All weights must be secured to weight rack.
 - All weight racks to be stationary.
12. First and second gear pulling only.
13. Shifting T.A.'s permitted.
14. No steel wheels or radial tires.
15. No dual wheels.
16. Disputes to be settled by equipment tech committee.
17. Maximum tire size 24.5.
18. All tractors must cross scales before and after they pull.
19. It is the pullers responsibility to provide proof of tractors eligibility.
20. Classes: 3000 3500 4500 5500 6500 7500 8500 9500 10500
21. Diesel must have air intake flapper.